ICM07 30-12-2002 14:42 Pagina 1

instructions

DēLonghi

Caffè solo

Automatic Filter Coffee Maker

DēLonghi

Living innovation

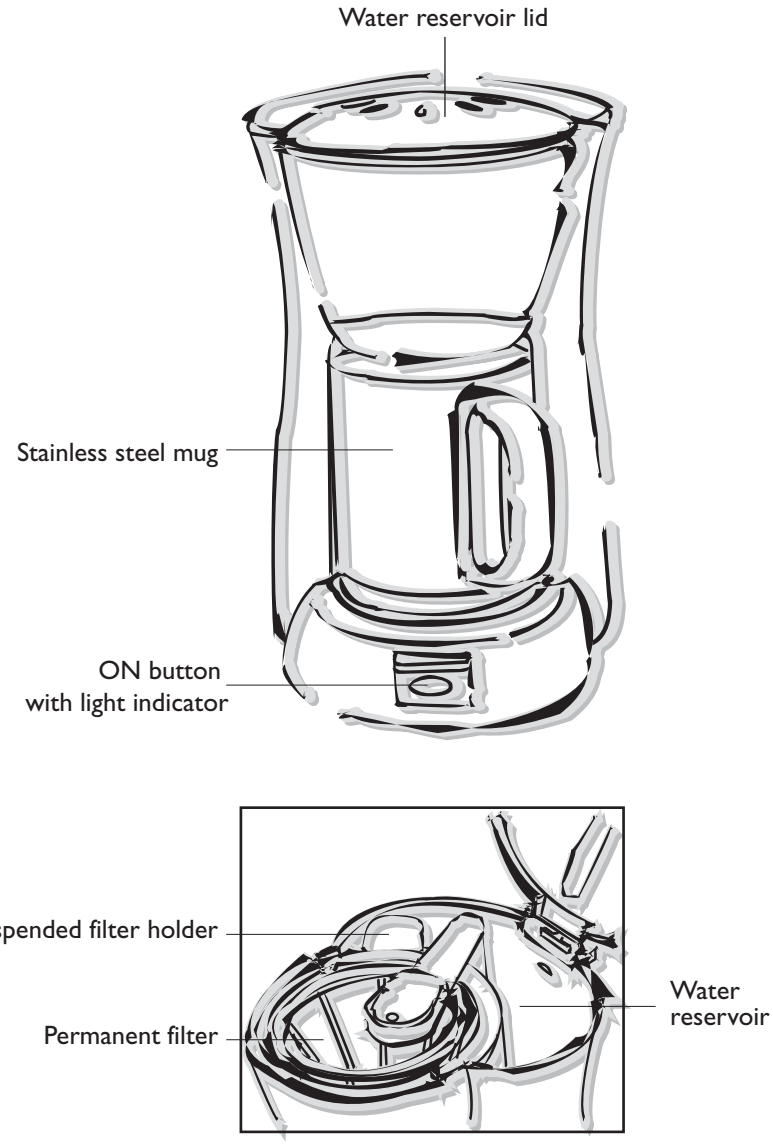
Water reservoir lid
Stainless steel mug
ON button
with light indicator
Suspended filter holder
Permanent filter
Water
reservoir

Thank you for choosing this De'Longhi coffee maker. To get the best results from your new coffee maker it is advisable to read these instructions carefully before using the appliance. This is the only way to ensure optimum results and maximum safety.

Using for the first time

Carefully unpack the coffee maker and remove all the packaging material. Before using wash the mug and surfaces. Do not immerse the coffee maker in water; simply wipe with a cloth and mild detergent if necessary. Do not put in the dishwasher or use harsh, abrasive cleaners.
For the best tasting results prior to making coffee we recommend that you flush the coffee maker out with cold water only, without using coffee to remove any dust which may still be inside the coffee maker. To do this follow the directions 'Preparing the coffee'.

Installation

- Place the coffee maker on a flat work surface at a safe distance from taps and sinks.
- Check that the voltage corresponds to that indicated on the appliance rating plate. The appliance must always be connected to a well-earthed socket rated at 10A minimum. The manufacturer is not liable for damage caused by inadequate earthing of the appliance.
- In the event of incompatibility between the plug on the appliance and the socket, have the plug replaced by a qualified service engineer.
  If the cable is damaged or requires replacing, contact a service centre authorised by the manufacturer only.
- Never install the machine in an environment that can reach a temperature less than or equal to 0°C (the appliance may be damaged if the water freezes).
- N.B.: This coffee maker has an on button instead of a switch.

Preparing the coffee

1. Fill the mug with cold water from the tap.
2. Lift the water reservoir lid and pour the water into the reservoir.
3. Place the permanent filter into the filter holder and place ground coffee into the filter (approx 7grms). Close the lid.
4. Place the mug underneath the filter holder and plug in the appliance.
5. Press the on button, the indicator light will come on.
6. The coffee will start to filter through.
7. When there is no more water left in the reservoir, the coffee maker will switch off automatically.
8. Wait about three minutes before removing the mug to allow the coffee to finish filtering.

Cleaning and maintenance

- Before cleaning or maintenance always turn the appliance off, unplug from the mains socket and leave to cool
- When cleaning the appliance and tray use a soft, damp cloth; do not use solvents or abrasive detergents
- The mug and filter holder can be washed in the dishwasher
- Never emerge the appliance in water

Descaling

Over time, calcium in the water may build up and cause blockages reducing the efficiency of the coffee machine and increasing the time required to make coffee. To obtain optimum performance, the appliance should be descaled regularly.

- Using equal parts of water and vinegar pour the solution into the water reservoir and switch on the appliance.
- When the solution has flowed through, repeat again twice more using water only to rinse the appliance thoroughly.

Safety Warnings

- This appliance is designed to make coffee. Take care during use to avoid burns caused by the water or steam jets or improper use of the appliance.
- When the appliance is in use, do not touch any of the machine's hot surfaces.
- After unpacking, make sure that the machine is complete and undamaged. In case of doubt, do not use and seek the advice of a qualified service professional.
- Packaging materials (plastic bags, foam polystyrene, etc.) should not be left within the reach of children as this could be a potential source of danger.
- This appliance is to be used for domestic use only. Any other use is to be considered improper and therefore, dangerous.
- The manufacturer takes no responsibility for damage derived from improper use.
- The use of an accessory not recommended for use with this appliance may cause injuries.
- Never use warm or hot water to fill the water reservoir, use cold water only.
- Never lift the lid during the brewing cycle as this may cause scalding.
- Never touch the appliance with wet or damp hands.
- Never allow the appliance to be used by children or unfit persons.
- Do not allow children to play with the appliance.
- In the event of breakdown or malfunctioning, turn the appliance off immediately and do not touch. For repairs, please contact a Service Centre authorized by the manufacturer failure to observe the above points may affect the safety of the appliance.
- The power cable must never be replaced by the user. If the cable should become damaged, or needs to be replaced, please contact a Service Centre authorized by the manufacturer.
- When the appliance is not in use, turn off and disconnect the plug from the socket.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.

Power cord

A short power cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.
An extension cord may be used with care; however, ensure the marked electrical rating is at least as great as the rating of this appliance.
The extension cord should be positioned so it does not drape over the counter or tabletop where it can be pulled by children or tripped over. The electrical rating of this appliance is listed on the bottom panel of the appliance.

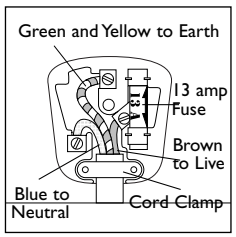

Electrical requirements

Before using this appliance ensure that the voltage indicated on the product corresponds with the main voltage in your home, if you are in any doubt about your supply contact your local electricity company.

The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 13 amp capacity. Should this plug not fit the socket outlets in your home, it should be cut off and replaced with a suitable plug, following the procedure outlined below.

Note: Such a plug cannot be used for any other appliance and should therefore be properly disposed of and not left where children might find it and plug it into a supply socket - with the obvious consequent danger.

N.B. We recommend the use of good quality plugs and wall sockets that can be switched off when the machine is not in use.

important: the wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

GREEN AND YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol ⏚ or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug. If your electricity supply point has only two pin socket outlets, or if you are in doubt, consult a qualified electrician.

Should the mains lead ever require replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord of the same size.

After replacement of a fuse in the plug, the fuse cover must be refitted. If the fuse cover is lost, the plug must not be used until a replacement cover is obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the fuse recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover.

Only 13amp replacement fuses which are asta approved to B.S. 1362 should be fitted.

This appliance conforms to the Norms EN 55014 regarding the suppression of radio interference.

Warning - this appliance must be earthed

ICM07 30-12-2002 14:42 Pagina 7